

ATTENTION - THIS CABINET IS HEAVY - PLEASE USE AN ASSISTANT

Having unpacked your Denward CD Cabinet first ensure you have received all the parts.

(Please notify Denward within 48 hours of delivery if any parts are missing or damaged)

Parts Included

CD Cabinet
4 x M8 Wall Bolts
2 x Keys

1. Select a suitable location for the cabinet ensuring that the wall surface is flat.
2. To avoid having to lift and hold the heavy cabinet whilst marking the fixing holes, cut the cardboard packing box and mark the fixing holes on it so that it can be used as a template to mark the wall.
3. With a 14mm masonry drill, drill the holes.
4. Insert the wall bolts into the holes and remove the bolts and washers from the end.
5. With help carefully lift the cabinet into position and secure it to the wall using the bolts and washers. Tighten the bolts with a 13mm spanner. **(Do not over tighten as this will distort the cabinet or damage the brick work)**

Important Notes

- It is essential that the cabinet is fitted to a flat wall as tightening the cabinet to an uneven surface will result in distortion of the case with the doors failing to close correctly. Fixing to an uneven surface is possible using suitable packing pieces to remove any irregularity.
- If floor fixing the floor and the wall must be at right angles to each other so the cabinet does not distort.
- Under no circumstances should the doors be removed to aid fitting as this may result in them failing to close when they are re-fitted.